How to Remove Front Wheel

Open brake

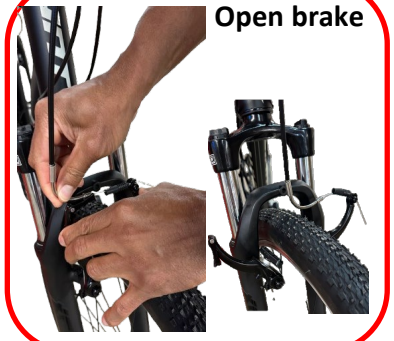

Flip over bike

Open quick release

Loosen nut side of the quick release

Do not remove the nut all the way

Pull out wheel

How to Install Front Wheel

Place wheel back in

Make sure the wheel is straight and in all the way in the drop out

Tighten the quick release nut

Test to make sure, that it is not too tight

Once quick release is tight close the quick release

Flip bike over

Close brake

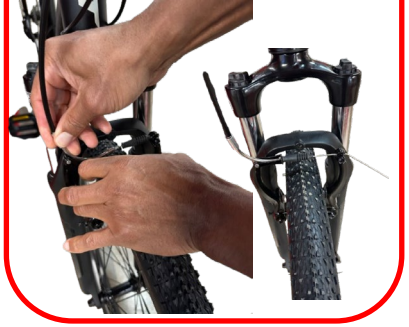

Make sure the wheel is not rubbing on the brakes

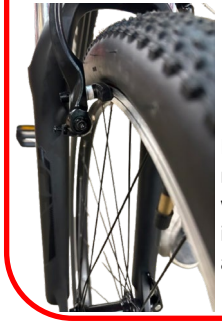

If there is rubbing make sure the wheel is all the way up and straight

How to Remove Rear Wheel

Make sure the rear is shifted to the smallest cog

Open brake

Flip over bike

Open quick release

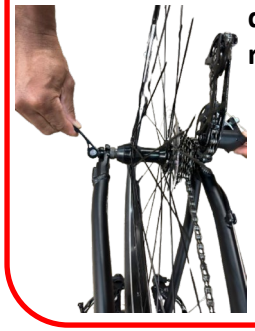

Pull the rear derailleur
And pull out the wheel

Watch for the drop out and rear derailleur

How to Install Rear Wheel

Pull the rear derailleur

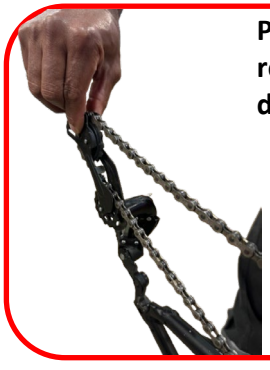

Place the chain on the smallest cog of the cassette

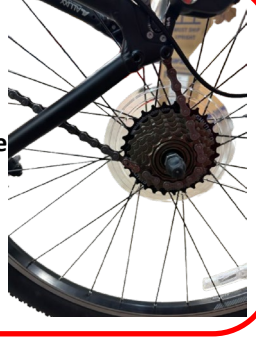

Place wheel back up

Watch for the drop out and rear derailleur

Close the quick release

Flip bike over

Close brake

Make sure the wheel is not rubbing on the brakes

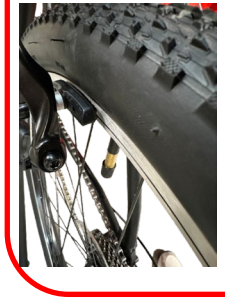

If there is rubbing make sure the wheel is all the way up and straight